


Soldier Course Lintel Repair System

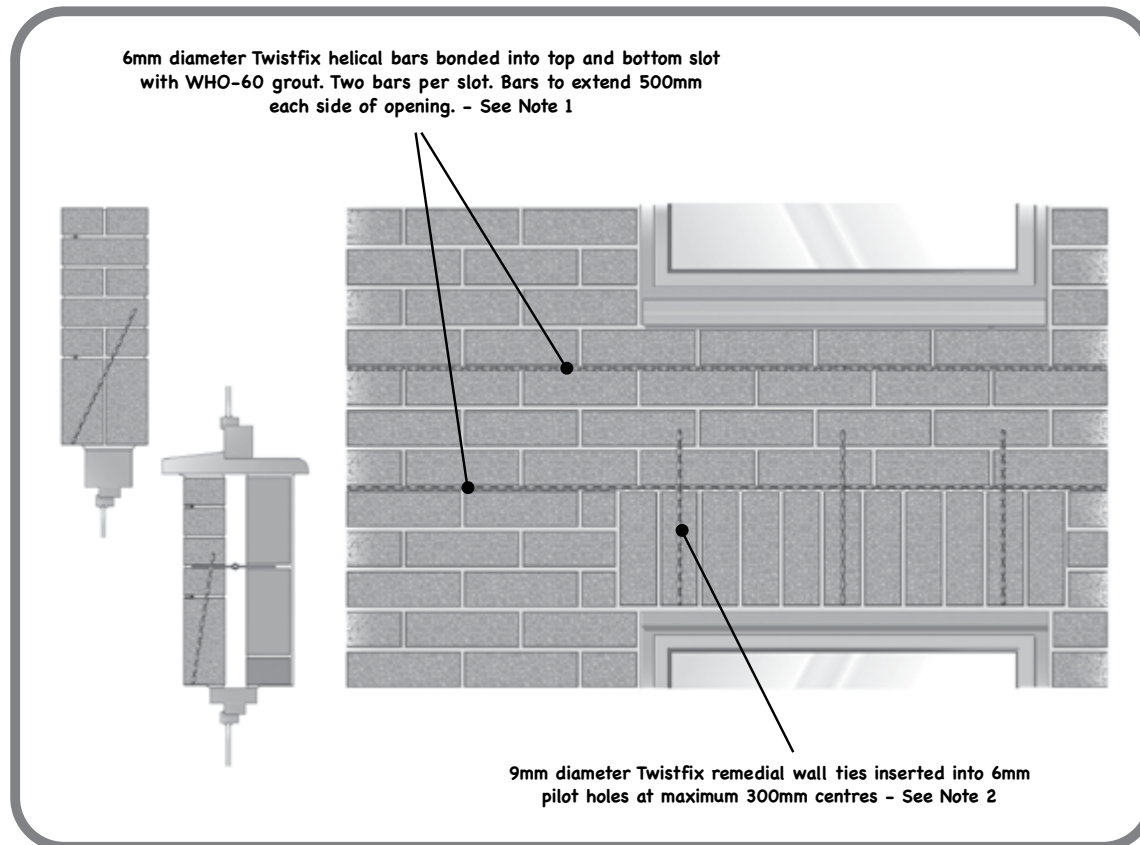

METHOD STATEMENTS & NOTES

1. Remove section of mortar to full height in two separate bed joints. Flush with clean water and bond a pair of 6mm Twistfix helical bars, 10mm apart, into each slot using WHO-60 grout. Make good joint to match existing.
Depth of the slots should be 40mm on a half brick single leaf and 55mm on a full brick solid leaf. Treat thicker walls from both sides.
Ratio between span of opening and distance between top and bottom reinforcement should not exceed 7:1
2. Drill angled 6mm pilot hole to a depth of at least 10mm longer than length of the Helical tie. Drive 9mm Twistfix remedial wall tie up through soldier course and at least 50mm beyond lower pair of bars and make good hole to match

HELICAL TIES & BARS

- Material: 304 Series Stainless Steel
- Ult.Tensile Strength: 1050-1200N/mm²
- Nominal CSA: 6mm Bar = 7.4mm²
9mm Tie = 14.9mm²

WHO60 GROUT AT 28 DAYS

- Compressive Strength: 55N/mm²
- Tensile Strength: 5N/mm²
- Flexural Strength: 12N/mm²
- Youngs Modulus: 13N/mm²